


OTTOMAN ASSEMBLY INSTRUCTIONS

Parts List

Ottoman:

- (2) side frames
- (2) crossbars
- (4) screws for chair
- (2) screws for cushion attachment

Lay one of the ottoman sides on the floor and insert the (2) crossbars.

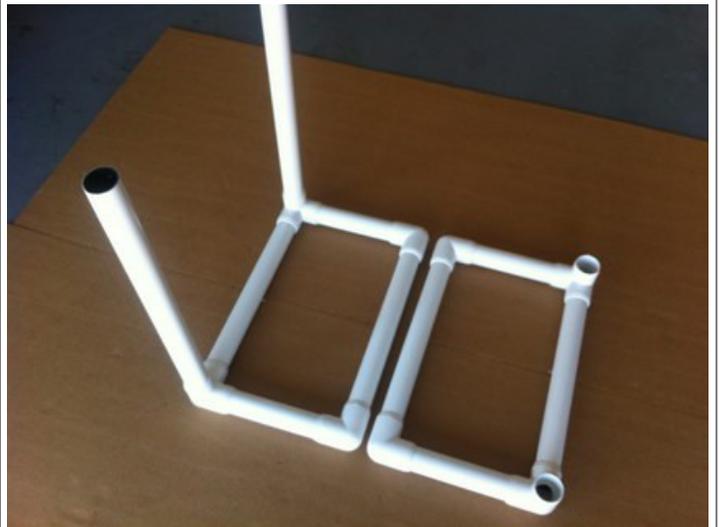

Place the sling over the crossbars. Make sure it is centered on the length of the crossbars.

Position the other side assembly over the crossbars. It will require some pressure to stretch the sling tight as you do this.

Once the crossbars are inserted, press the frames together by pushing down on them, then fully insert them with a mallet.

DO NOT HIT THE FRAMES HARD WITH THE MALLET, OR THE PIPE OR FITTINGS MAY BREAK.



Stand the ottoman upright on a level surface and press down on the frame to align the frame.



Insert the (4) supplied screws into the pre-drilled holes underneath each of the crossbar fittings on both sides.



Insert the (2) special screws into the pre-drilled holes on the insides of the top two bars.

Do not screw them all the way into the fittings—leave about $\frac{1}{8}$ " of thread showing.

These screws are used to hook the plastic tabs of the ottoman cushion over to hold the cushion firmly on the ottoman.



We urge you to watch the 2-minute chair assembly video on our website at:
<http://pipefinepatiofurniture.com/furniture-assembly-videos.html>